

MarCom Professional – verze 5.3-1

Nové a praktické inovace pro uživatele

The screenshot shows the MarCom Professional software interface. On the left, a list of USB devices is displayed:



| Device ID | Description | Measured Value | Data Request |
|--------------|---|----------------|--|
| 1 USB-Device | Instrument, Data Cable | | |
| i-RF3 | Micrimar 40 EWRi Micromar 40EWRi i-RF 01003 | 2.020 | Request: Key: F2 Excel: MarCom.xls/Tabelle1/C,3 |
| i-RF2 | Multimar 25 EWRi Multimar 25EWRi i-RF 01002 | 220.00 | Request: Key: F2 Excel: MarCom.xls/Tabelle1/B,3 |
| i-RF1 | MarCal 16 EWRi MarCal 16EWRi i-RF 01001 | 20.20 | Request: Key: F2 Excel: MarCom.xls/Tabelle1/A,2 |

A red arrow points from the 'MarCal 16 EWRi' row to a pop-up window titled 'MarCom professional' which displays the value '20.20' in large black digits on a yellow background. The pop-up also features a 'Reset' button and a 'PIC 2020' indicator.


| | A | B | C | D | E | F | G | H | I |
|----|---------------|------------|------------|-------------|--------|------------|-----------|------------|----------|
| | Nominal Value | upper Tol. | lower Tol. | Value in mm | Device | Serial no. | Order no. | Date | Time |
| 3 | | 6,82 | 6,78 | 6,82 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:24:29 |
| 4 | 6,79 | 6,82 | 6,78 | 6,76 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:24:36 |
| 5 | 6,79 | 6,82 | 6,78 | 6,61 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:24:40 |
| 6 | 6,79 | 6,82 | 6,78 | 6,8 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:24:43 |
| 7 | 6,79 | 6,82 | 6,78 | 6,8 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:25:00 |
| 8 | 6,79 | 6,82 | 6,78 | 6,81 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:25:01 |
| 9 | 6,79 | 6,82 | 6,78 | 6,85 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:25:03 |
| 10 | 6,79 | 6,82 | 6,78 | 6,81 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:25:10 |
| 11 | 6,79 | 6,82 | 6,78 | 6,75 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:25:11 |
| 12 | 6,79 | 6,82 | 6,78 | 6,75 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:25:13 |
| 13 | 6,79 | 6,82 | 6,78 | 6,81 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:25:14 |
| 14 | 6,79 | 6,82 | 6,78 | 6,83 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:25:16 |
| | 6,79 | 6,82 | 6,78 | 6,78 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:25:18 |
| | 6,79 | 6,82 | 6,78 | 6,79 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:25:20 |

MarCom Professional – Nová a praktická vylepšení

- Okno s naměřenou hodnotou je možné zvětšovat

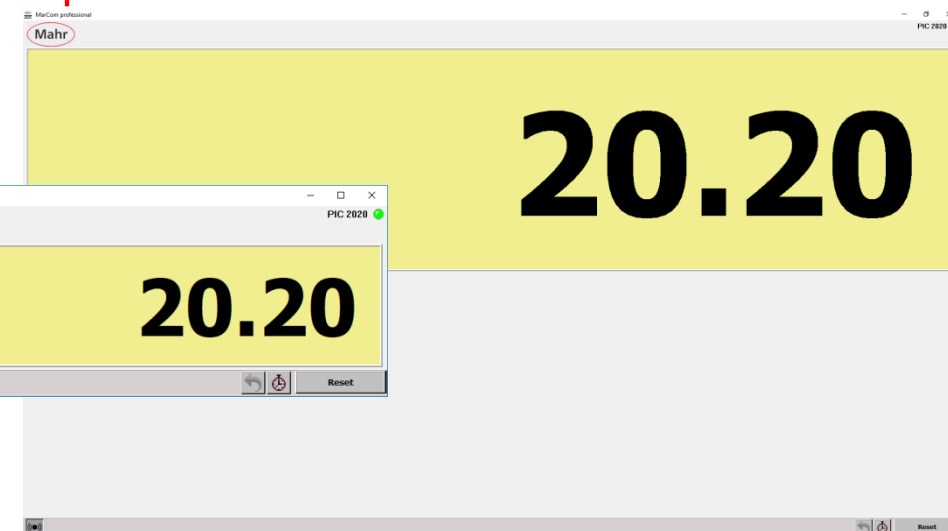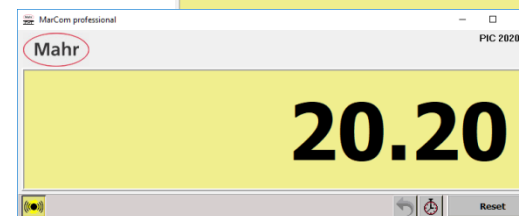




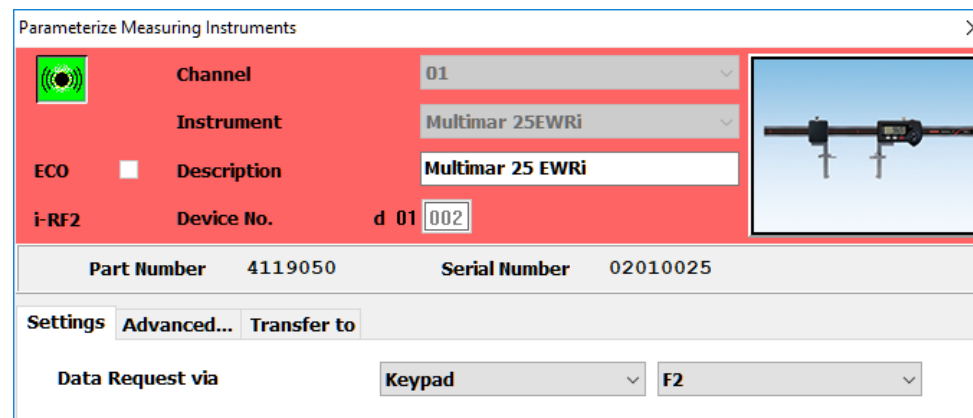

- Integrace nových měřidel
18 EWri / 25 EWri / MarSurf M310

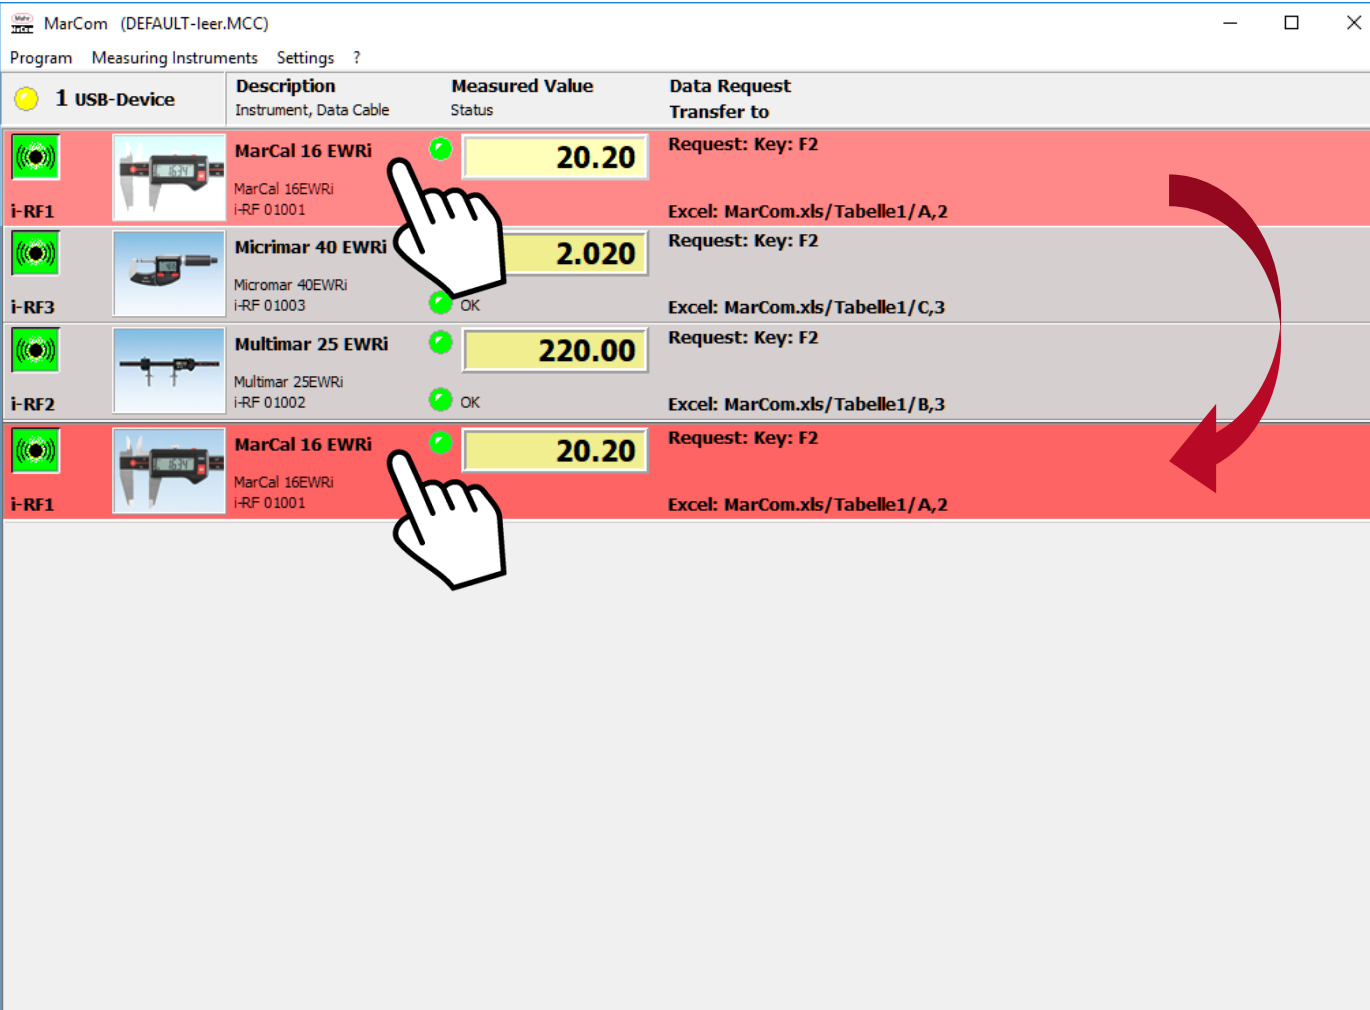

MarCom Professional – Nová a praktická vylepšení


- Manuálního uspořádání měřidel způsobem „Track and Drop“



| 1 USB-Device | | Description | Measured Value | Data Request |
|--------------|---|--|---------------------|--|
| | | Instrument, Data Cable | Status | Transfer to |
| i-RF1 |  | MarCal 16 EWRi MarCal 16EWRi i-RF 01001 | 20.20 | Request: Key: F2 Excel: MarCom.xls/Tabelle1/A,2 |
| i-RF3 |  | Micrimar 40 EWRi Micromar 40EWRi i-RF 01003 | 2.020 OK | Request: Key: F2 Excel: MarCom.xls/Tabelle1/C,3 |
| i-RF2 |  | Multimar 25 EWRi Multimar 25EWRi i-RF 01002 | 220.00 OK | Request: Key: F2 Excel: MarCom.xls/Tabelle1/B,3 |
| i-RF1 |  | MarCal 16 EWRi MarCal 16EWRi i-RF 01001 | 20.20 | Request: Key: F2 Excel: MarCom.xls/Tabelle1/A,2 |

MarCom Professional – Nová a praktická vylepšení

- Manuálního uspořádání měřidel způsobem „Track and Drop“

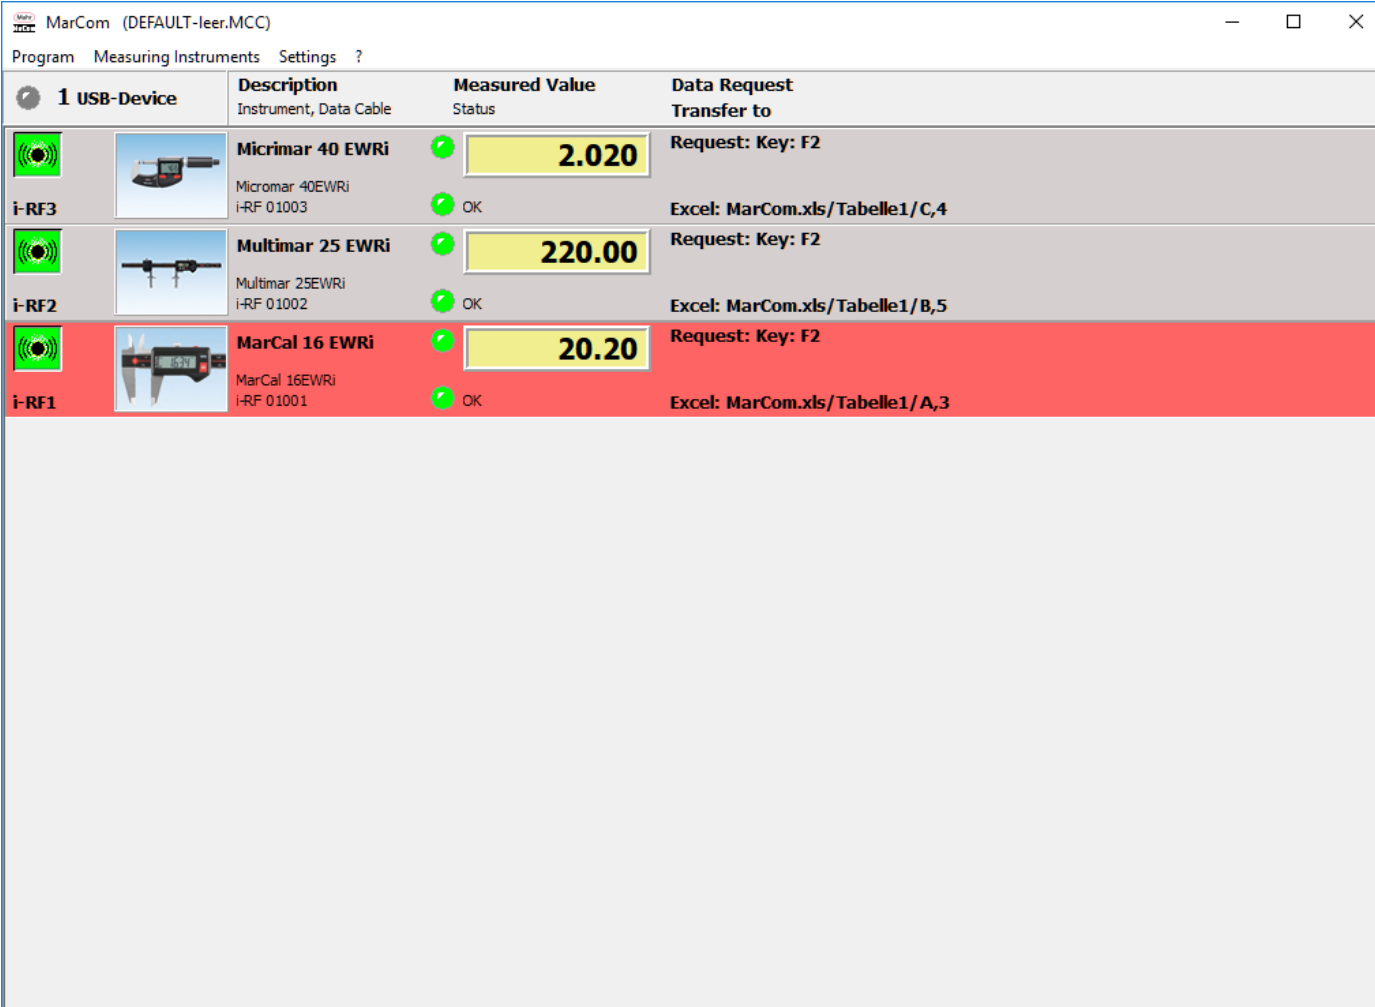


The screenshot shows the MarCom software interface with a table of measuring instruments. The table has four columns: USB-Device, Description, Measured Value, and Data Request. The third row is highlighted in red.

| 1 USB-Device | Description | Measured Value | Data Request |
|--------------|--|---------------------|--|
| i-RF3 | Micrimar 40 EWRI Micromar 40EWRI i-RF 01003 | 2.020 OK | Request: Key: F2 Excel: MarCom.xls/Tabelle1/C,4 |
| i-RF2 | Multimar 25 EWRI Multimar 25EWRI i-RF 01002 | 220.00 OK | Request: Key: F2 Excel: MarCom.xls/Tabelle1/B,5 |
| i-RF1 | MarCal 16 EWRI MarCal 16EWRI i-RF 01001 | 20.20 OK | Request: Key: F2 Excel: MarCom.xls/Tabelle1/A,3 |

MarCom Professional – Nová a praktická vylepšení


- Zobrazení „Obj. čísla“ a „Sériového čísla“
Nyní → je **možné** označení a **kopírování**
- Kompaktnější přehled
Nyní → Nastavení ve **3 sekcích**:
 - Nastavení
 - Rozšířené nastavení
 - Přenos do

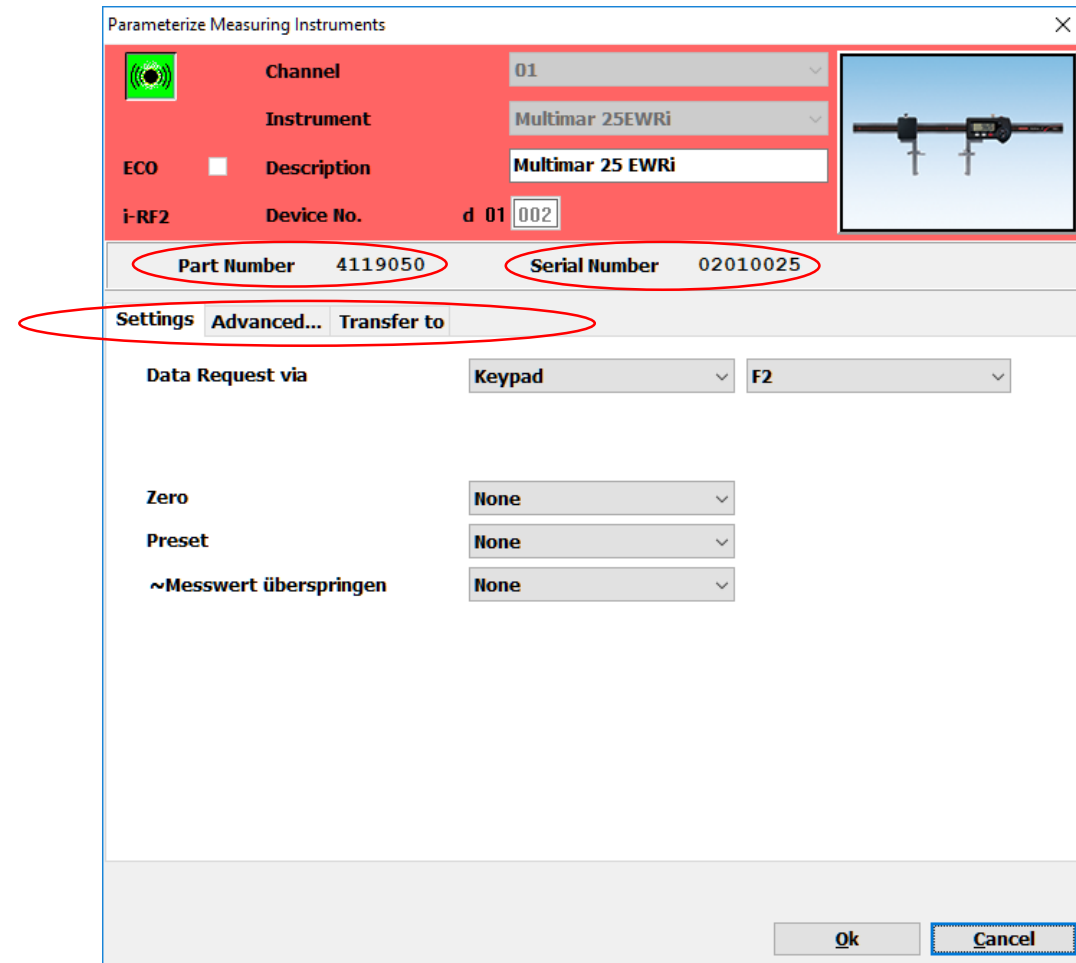

MarCom Professional – Nová a praktická vylepšení

Nastavení

- Beze změny

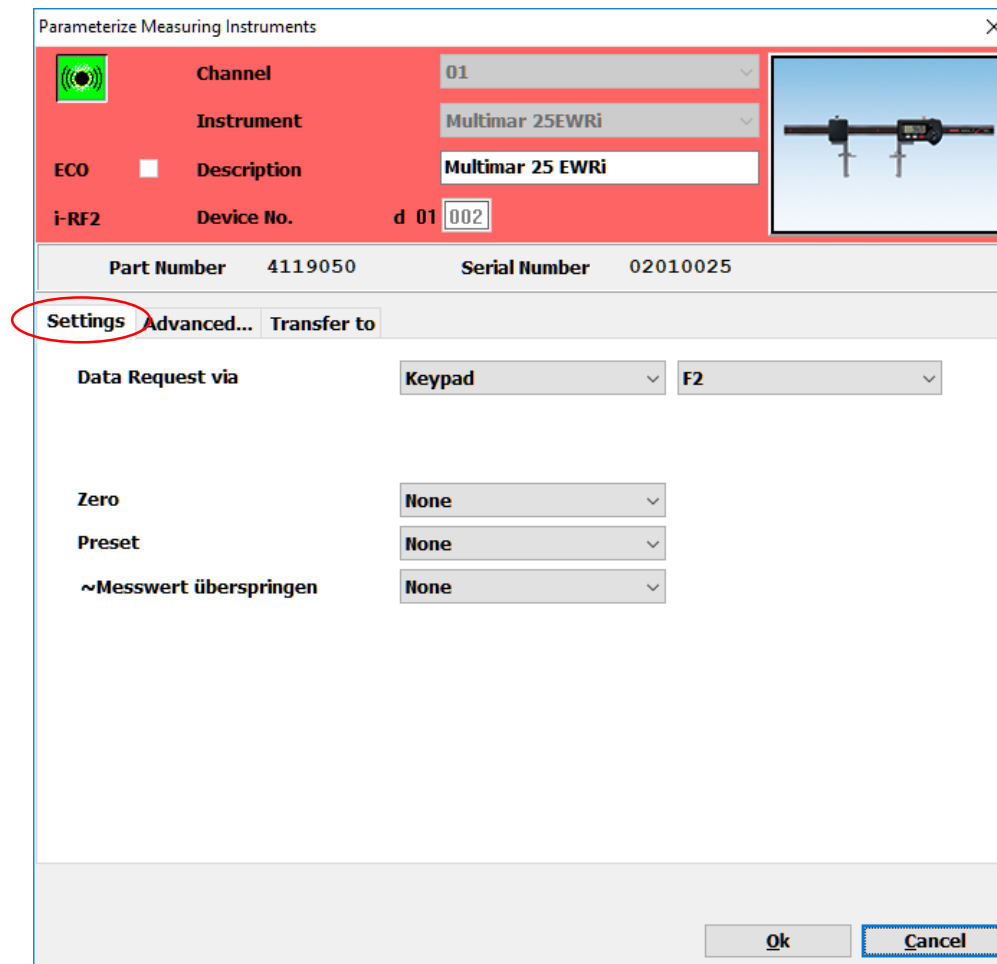

MarCom Professional – Nová a praktická vylepšení

Rozšířené nastavení

- Získání a změna **Referenčních hodnot**
 - Preset
 - Tolerance
 - Varovné hranice v %
- **Funkce uzamčení nastavení**
 - aktivovat
 - deaktivovat

Parameterize Measuring Instruments

Channel: 01
Instrument: Multimar 25EWRi
Description: Multimar 25 EWRi
Device No.: d 01 002

Part Number: 4119050 Serial Number: 02010025

Settings: **Advanced...** Transfer to

Preset: 0 mm

Tolerances: Lower: 0 Upper: 0 mm (<-> < 1.6)

Warning Limits: 0% 10% 20% 30%

Lock functions:

- Lock/Unlock
- off
- mm/inch
- FA
- Reset
- ABS
- Preset
- Set Preset
- Tol
- SetTol


Send

Ok Cancel

MarCom Professional – Nová a praktická vylepšení


Přenos do

- Cíl je beze změny
- Zlepšení pro přenos do Excelu
 → Typ reference Řádek 1, Sloupec 1 (R1C1)

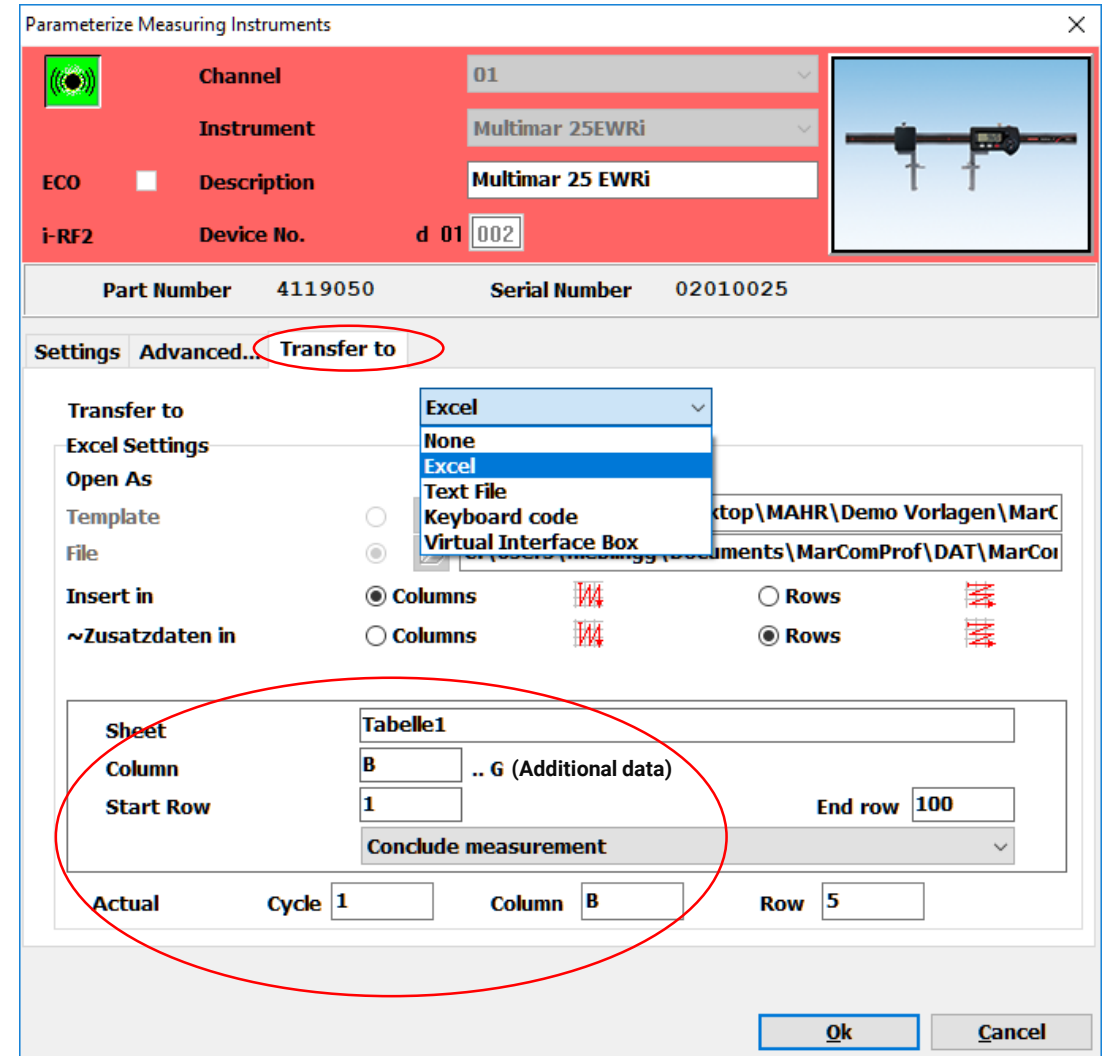

MarCom Professional – Nová a praktická vylepšení


- R1C1 Typ reference
 - Zpracování v Excelu tak, jak jste zvyklí.

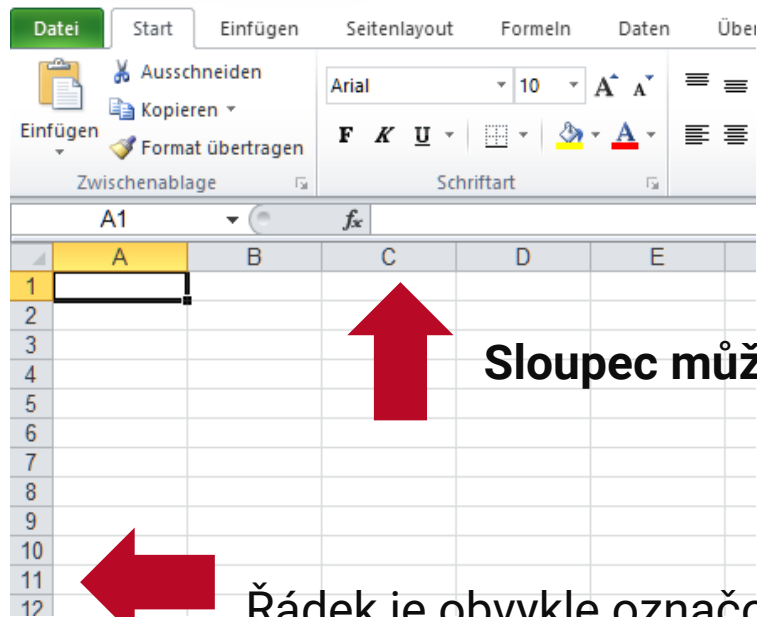

Sloupec může být označen i písmeny

Řádek je obvykle označován číslem



| | | | |
|----------------------|----------|------------------------|-------|
| Sheet | Tabelle1 | | |
| Column | B | .. G (Additional data) | |
| Start Row | 1 | End row | 100 |
| Conclude measurement | | | |
| Actual | Cycle | 1 | Row 5 |

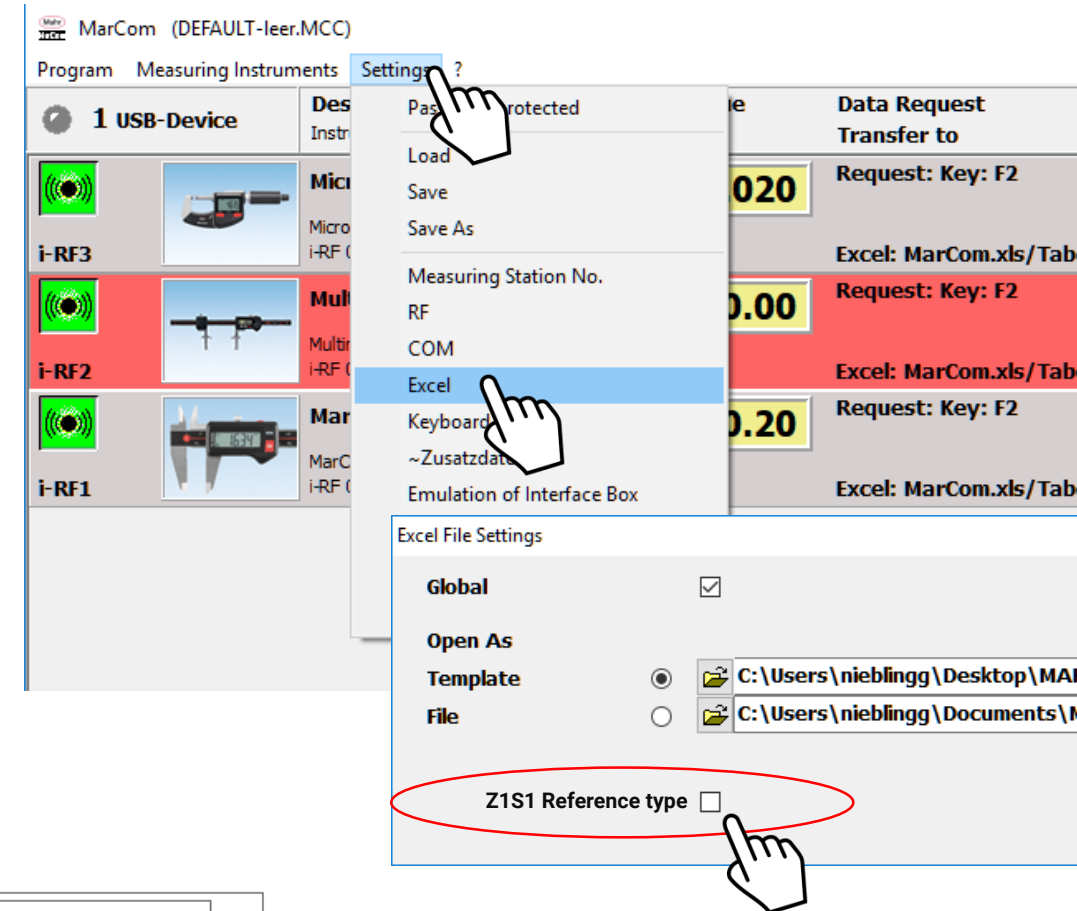

MarCom Professional – Nová a praktická vylepšení

Doplňující (přídavná) data

- Přenos dalších hodnot do Excelové tabulky.

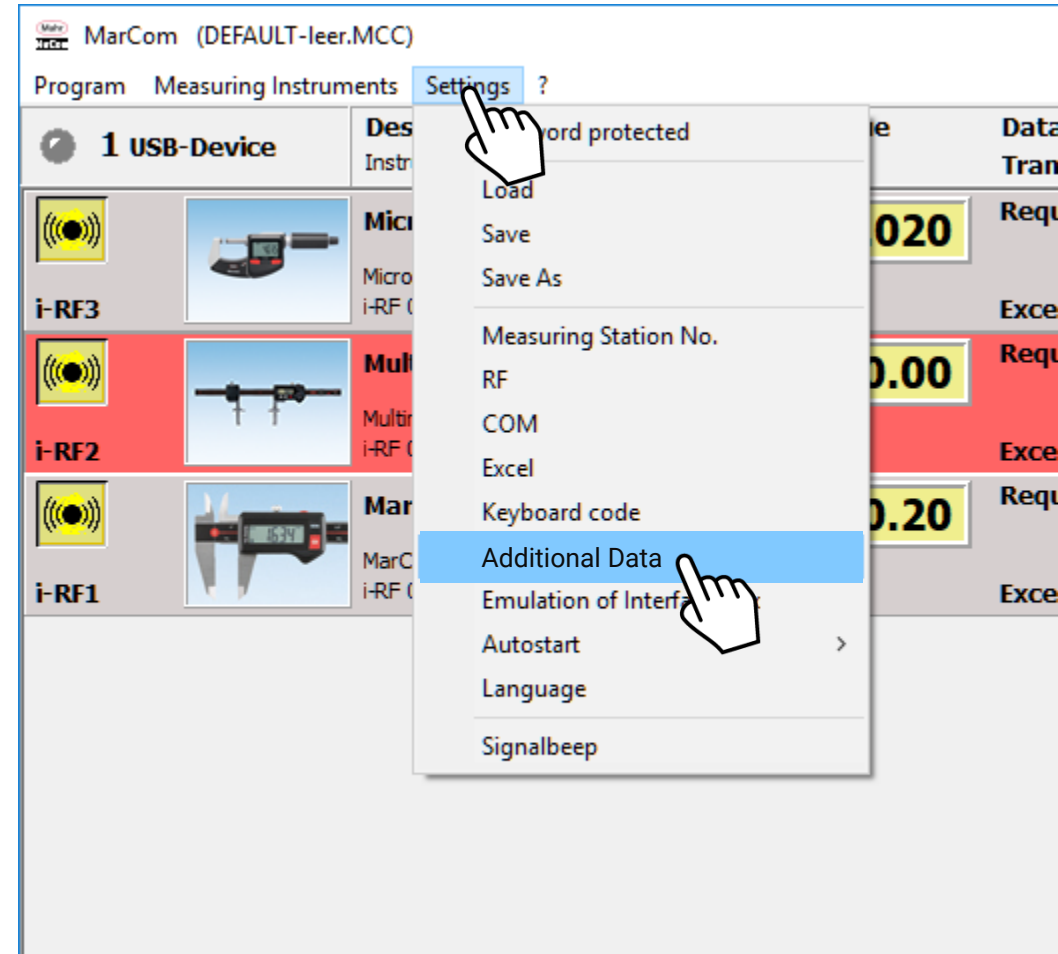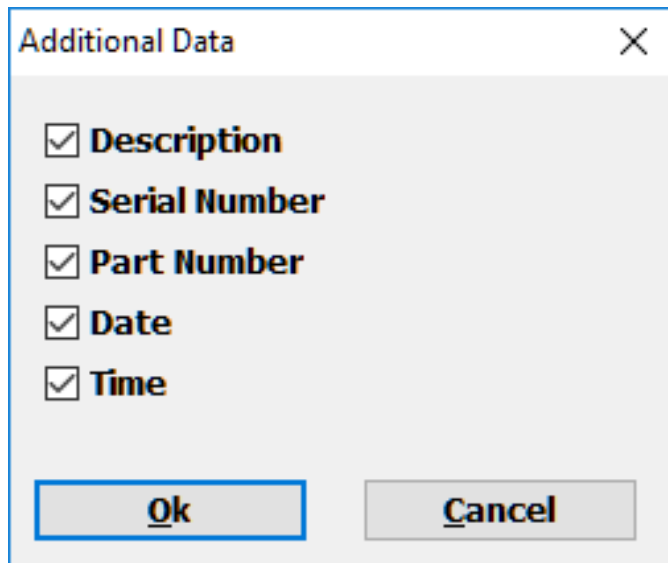

MarCom Professional – Nová a praktická vylepšení

Doplňující (přídavná) data

- Přenos dalších hodnot do Excelové tabulky.

| | A | B | C | D | E | F | G | H | I | J | K | L |
|----|----------------------|-------------------|-------------------|--------------------|---------------|-------------------|------------------|-------------|-------------|---|---|---|
| 3 | Nominal Value | <i>upper Tol.</i> | <i>lower Tol.</i> | Value in mm | Device | Serial no. | Order no. | Date | Time | | | |
| 4 | 6,79 | 6,82 | 6,78 | 6,82 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:24:29 | | | |
| 5 | 6,79 | 6,82 | 6,78 | 6,76 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:24:36 | | | |
| 6 | 6,79 | 6,82 | 6,78 | 6,61 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:24:40 | | | |
| 7 | 6,79 | 6,82 | 6,78 | 6,8 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:24:43 | | | |
| 8 | 6,79 | 6,82 | 6,78 | 6,81 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:25:00 | | | |
| 9 | 6,79 | 6,82 | 6,78 | 6,85 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:25:01 | | | |
| 10 | 6,79 | 6,82 | 6,78 | 6,81 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:25:03 | | | |
| 11 | 6,79 | 6,82 | 6,78 | 6,75 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:25:10 | | | |
| 12 | 6,79 | 6,82 | 6,78 | 6,75 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:25:11 | | | |
| 13 | 6,79 | 6,82 | 6,78 | 6,81 | i-RF2 | 2010025 | 4119050 | 08.05.2020 | 17:25:13 | | | |
| 14 | 6,79 | 6,82 | 6,78 | | | | | | | | | |
| 15 | 6,79 | 6,82 | 6,78 | | | | | | | | | |
| 16 | 6,79 | 6,82 | 6,78 | | | | | | | | | |
| 17 | | | | | | | | | | | | |


**Praktické
doplňkové
informace**

| | | | |
|----------------------|----------|-----------------------|-----|
| Sheet | Tabelle1 | | |
| Column | D | I.. (Additional data) | |
| Start Row | 4 | End row | 100 |
| Conclude measurement | | | |

Actual Cycle 1 Column B Row 5

MarCom Professional – Nová a praktická vylepšení

Vrácení posledního kroku i hodnoty v Excelu

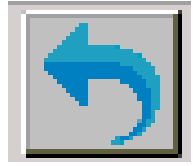

(možnost mazat pouze 1 poslední hodnotu)

| | A | B | C | D | E |
|----|---------------|------|------|-------------|---------|
| 1 | Test Report | | | Mahr | |
| 2 | | | | | |
| 3 | Nominal Value | upp | | Micrometer | Caliper |
| 4 | 20 | 2 | | | 20,2 |
| 5 | 20 | 2 | | | 20,2 |
| 6 | 20 | 20,3 | 19,9 | | 20,2 |
| 7 | 20 | 20,3 | 19,9 | | 20,2 |
| 8 | 20 | 20,3 | 19,9 | | 9,93 |
| 9 | 20 | 20,3 | 19,9 | | |
| 10 | 20 | 20,3 | 19,9 | | |
| 11 | 20 | 20,3 | 19,9 | | |

| | A | B | C | D | E |
|----|---------------|------|------|-------------|---------|
| 1 | Test Report | | | Mahr | |
| 2 | | | | | |
| 3 | Nominal Value | upp | | Micrometer | Caliper |
| 4 | 20 | 2 | | | 20,2 |
| 5 | 20 | 2 | | | 20,2 |
| 6 | 20 | 20,3 | 19,9 | | 20,2 |
| 7 | 20 | 20,3 | 19,9 | | 20,2 |
| 8 | 20 | 20,3 | 19,9 | | 20,2 |
| 9 | 20 | 20,3 | 19,9 | | |
| 10 | 20 | 20,3 | 19,9 | | |
| 11 | 20 | 20,3 | 19,9 | | |